


RV-1

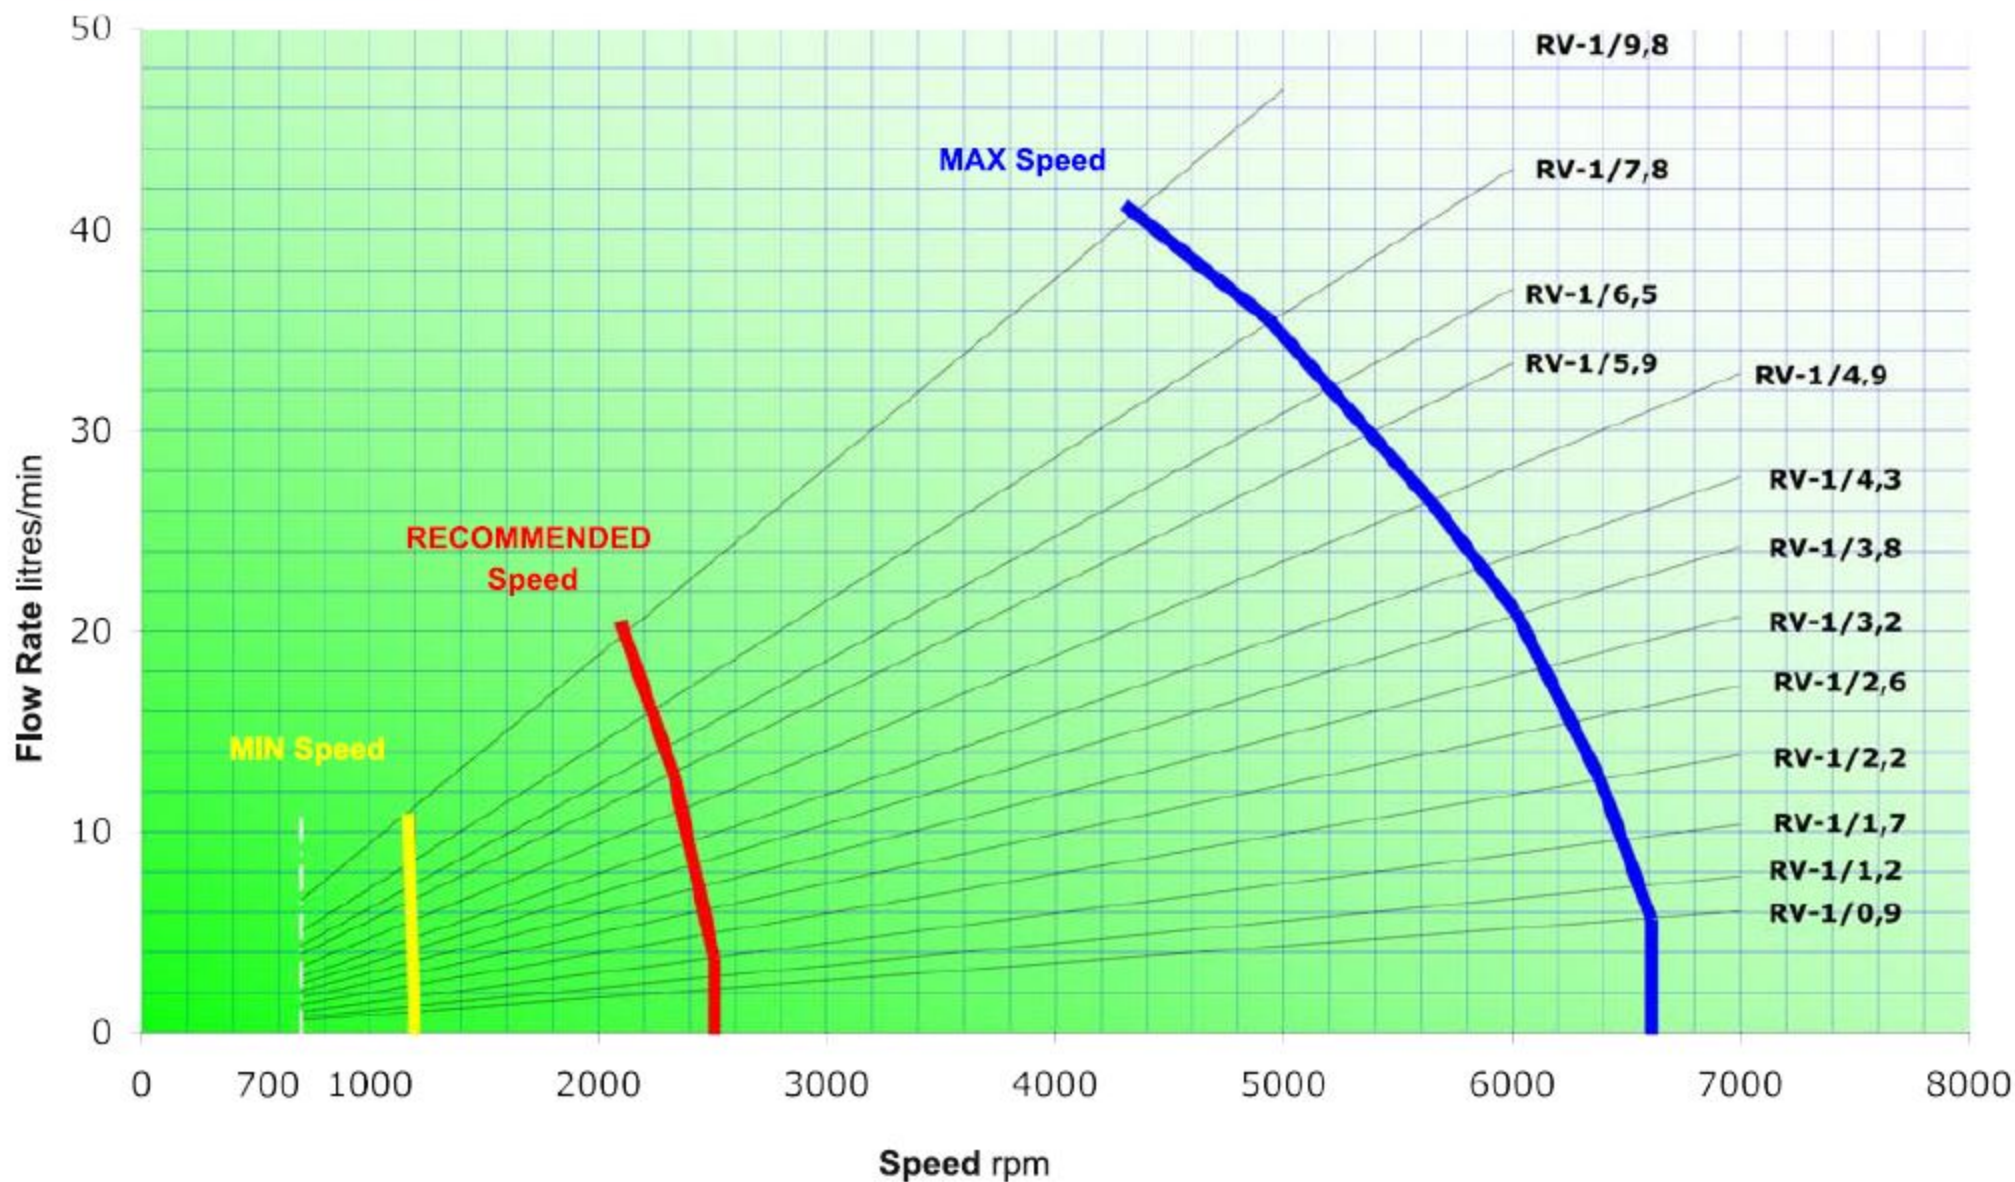

NOTE: the flow divider can work even below the minimum speed, but it's efficiency will be lower
the flow divider can work even over the maximum speed, but it will increase the noise and loss of load

CILINDRADA (cm3/rev)	CAPACIDAD DE UN ELEMENTO (l/min)			Nº DE REV. DE LOS ENGRANAJES		
	Mín.	Recom.	Máy.	Mín.	Recom.	Máy.
0,9	1	2	6	1200	2550	6600
1,2	1,5	3	7	1200	2550	6500
1,7	2	4	9,5	1200	2550	6450
2,2	2,5	5	13	1200	2500	6400
2,6	3	6	16	1200	2500	6250
3,2	3,5	7	19	1200	2450	6190
3,8	4,5	8	22,5	1200	2420	6000
4,3	5	9	26	1200	2400	5900
4,9	5,5	11	29	1200	2300	5650
5,9	6,5	13	30	1200	2280	5400
6,5	7,5	14	33	1200	2250	5200
7,8	8,5	17	38	1200	2200	4900
9,8	11	22	38	1200	2190	4250

Displacem.	Max Pressure bar	One element flow rate l/min		
Cm ³ /rev		MIN	RECOMMENDED	MAX
0,9	220	1	2	6
1,2	220	1,5	3	7
1,7	220	2	4	9
2,2	220	2,5	5	13
2,6	220	3	6	15,5
3,2	220	3,5	7,5	18
3,8	220	4	8,5	21
4,3	220	4,5	9,5	23
4,9	220	5,5	11	27
5,9	220	6,5	13	30
6,5	220	7,5	14	32
7,8	210	8,5	16	35,5
9,8	200	11	20	41